



526 Dover Ln.

Aylett, VA 23009

804-928-1839

www.tbamachine.com

todd@tbasuppressors.com

Pulley removal instructions

- 1. Remove rubber cap from pulley**
- 2. Put Demon pin tool in a vice with the holes facing up.**
- 3. Place the snout onto the pins**
- 4. Heat the inside of the factory pulley to 125-150 degrees. This is very important, if you ignore this step you will loosen the bolt that holds the drive hub on that spins the blower and it will have to be retoured with Loctite added.**
- 5. Remove the pulley with an impact wrench**